

UPHORIK QUICKSTART

LINN

Quickstart Guide for Uphorik Phono Stage

Thank you for purchasing the Linn Uphorik phono pre-amplifier. This quickstart guide provides basic unpacking and connecting info to get you started - full instructions are available in the Uphorik Online Manual.

IMPORTANT:

This sheet contains guidance on unpacking and setting up your phono pre-amplifier. Please refer to the printed Safety Information booklet for important safety information and the online manual for full instructions on using the Uphorik phono pre-amplifier.

Unpacking

- Remove product from packaging and place on a flat surface
- Please retain all packaging for future transport of Uphorik

Contents


- 1 x Uphorik phono pre-amplifier
- 1 x Mains cable
- 1 x pair of Linn Black interconnect cables
- 1 x Important Safety Info booklet
- 1 x foam protector

Positioning

- Place product on a flat, stable and rigid surface
- Use the foam protector to protect the top of unit when changing cartridge settings on underside of Uphorik
- Ensure the tonearm cable is not too close to mains, loudspeaker or interconnect cables
- Do not stack components and avoid placing near other heat sources
- Allow a little space all the way around the product for air circulation

Connecting

1. Before making any connections, switch off your power amplifier(s).
2. Connect using your preferred connection type (Phono/RCA or Balanced/XLR) for your cartridge type (Moving Magnet (MM) or Moving Coil (MC)).
3. Set the MM/MC Switch to the correct setting
4. Connect your mains cable and switch the unit on

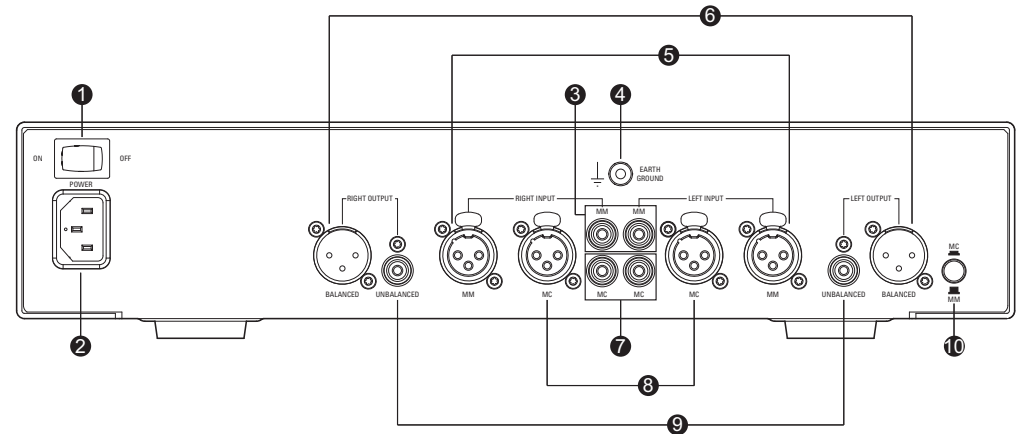


- 1 Power Switch - turn on and off
- 2 Mains Input - connect the mains cable
- 3 MM Input (L/R) - Phono/RCA
- 4 Earth Ground - connect to an earthing lead to improve earth bonding
- 5 MM Input (L/R) - Balanced/XLR
- 6 Balanced/XLR Output (L/R)
- 7 MC Input (L/R) - Phono/RCA
- 8 MC Input (L/R) - Balanced/XLR
- 9 Unbalanced/RCA Output (L/R)
- 10 MM/MC Switch - push in for MC; push out for MM

Cartridge Settings

Set the input impedance for the installed cartridge using the switch settings on the underside of the Uphorik. Ensure you use the same settings for left and right channels. You may wish to mute the pre-amplifier while you do this.

Refer to the product documentation from your cartridge manufacturer for appropriate values, or view the Uphorik Online Manual (see across) for popular non-Linn cartridges and instructions for optimising these settings for your cartridge.

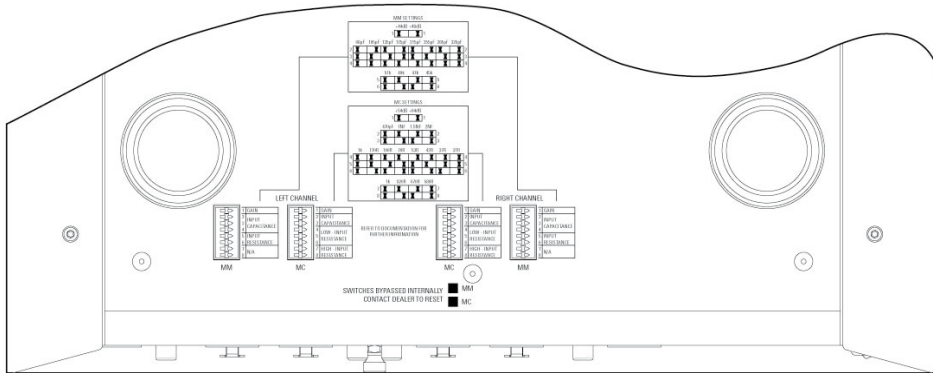

Optimum settings for Linn cartridges are as follows:

ADIKT	AKIVA	KLYDE
1 +44dB	1 +64dB	1 +64dB
2 3 4	2 3	2 3
5 6	4 5 6	4 5 6
7 8	7 8	7 8

Operation

The front panel LED will dim to indicate 'level clipping' when the output is too high. If the front panel LED indicates clipping regularly it may be necessary to lower the gain setting for this cartridge.

Online Manual

View the latest Online Manual for Linn Uphorik, including full instructions on operating your phono pre-amplifier.

Warranty

Please visit www.linn.co.uk/warranty within 30 days of purchase to register your product for an extended 5 year warranty.

Linn Records

Please visit www.linnrecords.com for a selection of recordings available on 180 gram vinyl.

Linn Products Limited

Glasgow Road, Waterfoot, Eaglesham,
Glasgow G76 0EQ, Scotland, UK

• Phone: +44 (0)141 307 7777 • Fax: +44 (0)141 644 4262
• Helpline: 0500 888909 • Email: helpline@linn.co.uk
• Website: www.linn.co.uk



LINN